



Spare Parts List

[Standard solenoid]

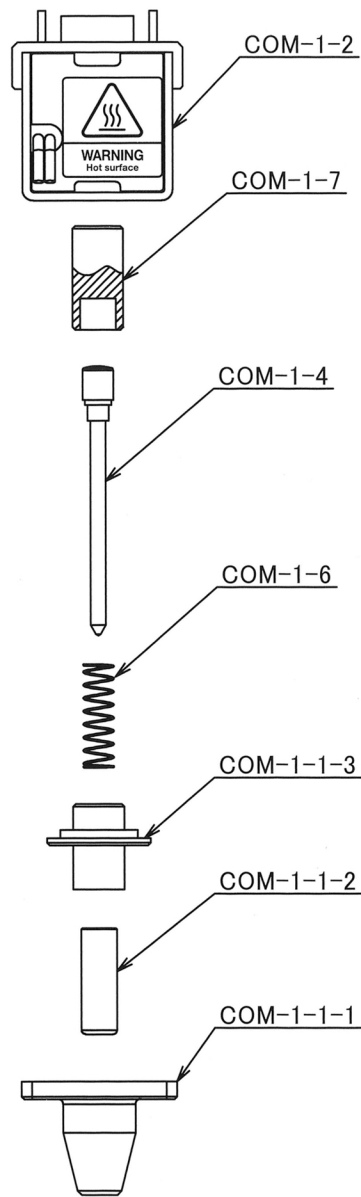

No.	Name
MBCOM-1-1-1	Pin Holder
MBCOM-1-1-2	Socket Bush
MBCOM-1-1-3	Pin Guide
MBCOM-1-2	Solenoid Assy.
MBCOM-1-4-P52-040	Stylus Pin Std. Hardness
MBCOM-1-4-P52-060	
MBCOM-1-4-P52-120	
MBCOM-1-4-HG-040	Stylus Pin High Hardness
MBCOM-1-4-HG-060	
MBCOM-1-4-HG-120	
MBCOM-1-6	Spring
MBCOM-1-7	Hammer

[BSD]

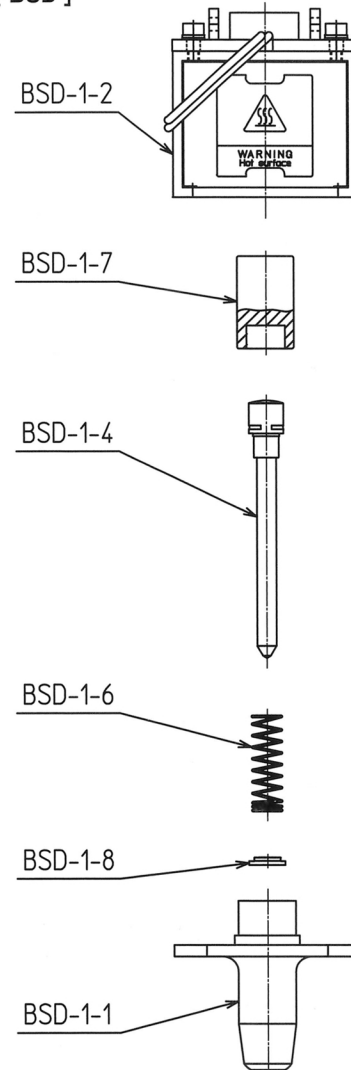

No.	Name
MB-BSD-1-1	BSD Pin Holder
MB-BSD-1-2	BSD Solenoid Assy
MB-BSD-1-4-060	BSD Stylus Pin Std. Hardness, Std. Length
MB-BSD-1-4-120	
MB-BSD-1-5-060	BSD Stylus Pin Std. Hardness, Long Length
MB-BSD-1-5-120	
MB-BSD-1-6	BSD Spring
MB-BSD-1-7	BSD Hammer
MB-BSD-1-8	BSD Washer